



REFRIGERATION AND
AIR CONDITIONING

Instructions


Pulse module AK-XM 107A






080R9241




RI8KE402

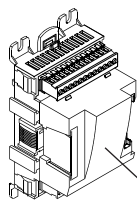

080Z0020

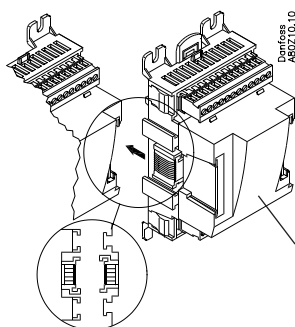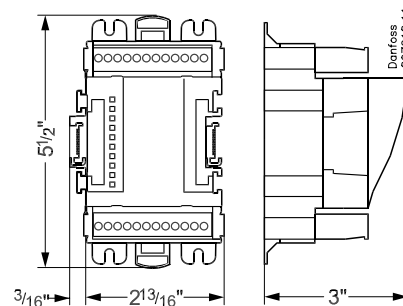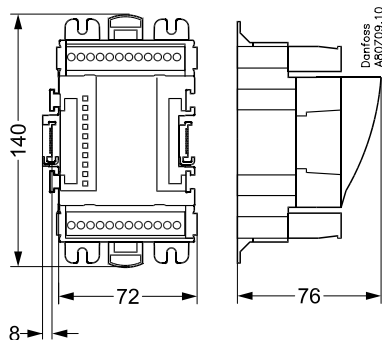

AK-XM 107A

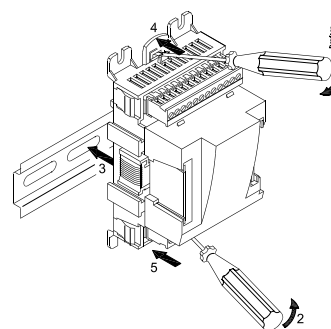

CE


-20°C < t_{amb} < 55°C
-0°F < t_{amb} < 130°F
0 - 95% RH, non condensing
IP10 / VBG4

DIN 43864
S01 interface




Warning

Ensure power is
disconnected before
adding or removing
Modules

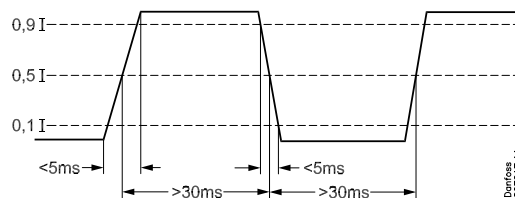


DIN 43864


CI x 8

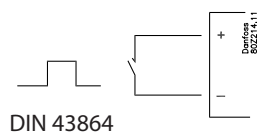


DIN 43864

 


DIN 43864

 



DIN 43864

 



DI

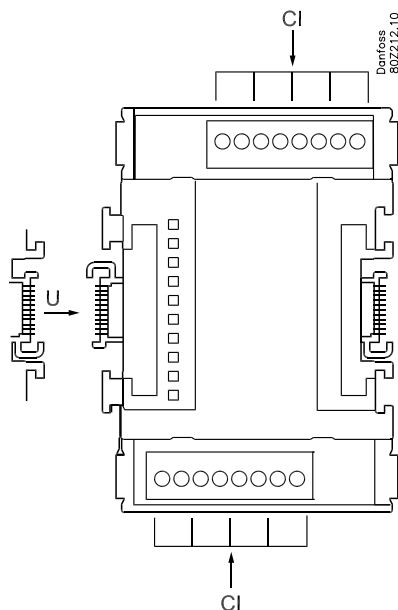

Point

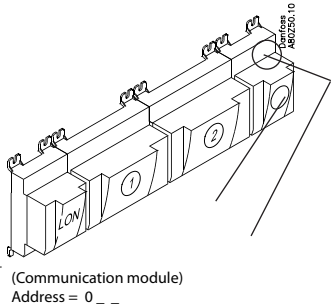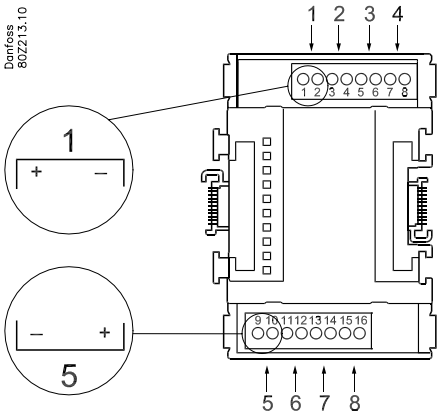

Address

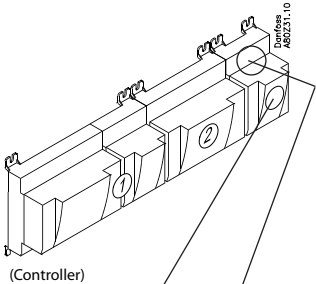 

	Signal	Active at
CI		Pulse
DI (On/off)		On/ Off Ext.Main Switch Day/ Night Door

Signal	Active at	Module	Point	Terminals
			1 (CI 1)	1 - 2
			2 (CI 2)	3 - 4
			3 (CI 3)	5 - 6
			4 (CI 4)	7 - 8
			5 (CI 5)	9 - 10
			6 (CI 6)	11 - 12
			7 (CI 7)	13 - 14
			8 (CI 8)	15 - 16

The Product contains electrical components.
The Product must be disposed of as electronic waste.
Equipment must be separated from Electrical and Elec-
tronic waste. According to local and currently valid legislation.

