



REFRIGERATION AND
AIR CONDITIONING

Instructions


AK-XM 205B





080R9218




RI8HM602

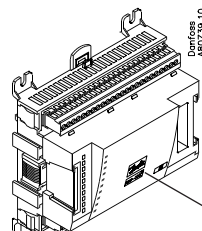

080Z0017

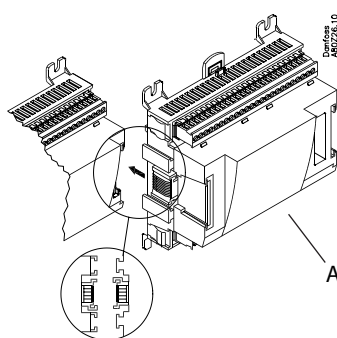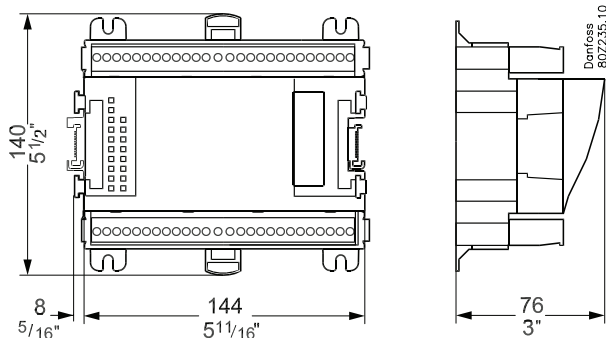

AK-XM 205B

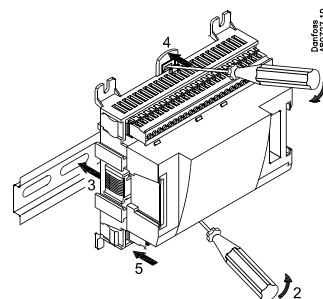

CE

$-20^{\circ} < t_{amb} < 55^{\circ}C$

$-0^{\circ}F < t_{amb} < 130^{\circ}F$

0 - 95% RH, non condensing

IP10 / VBG4

UL: E357029



Warning

Ensure power is
disconnected before
adding or removing
Modules


AI x 8
DO x 8

Danfoss
A60Z40.11

AI

max. 10 V

OFF AUTO ON

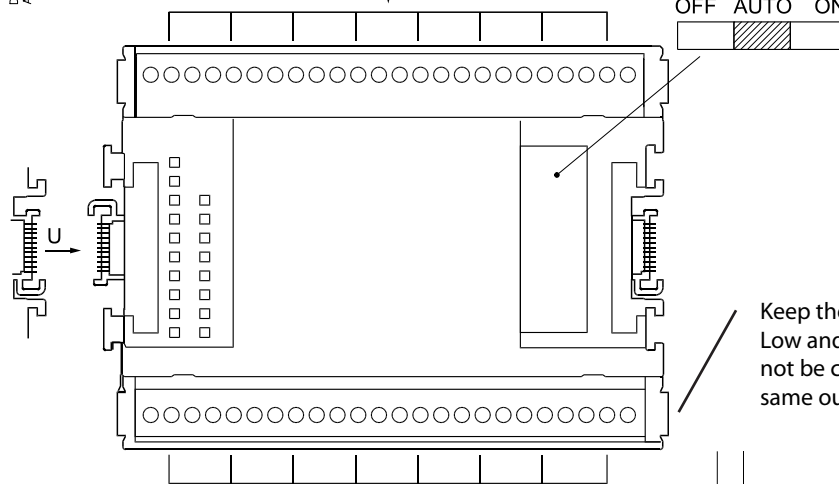




ON/OFF

Keep the safety distance
Low and high voltage must
not be connected to the
same output group

SPDT
Max. 230 V
AC-1: max. 4 A (ohmic)
AC-15: max. 3 A (Inductive)


Point

Danfoss
80241.11

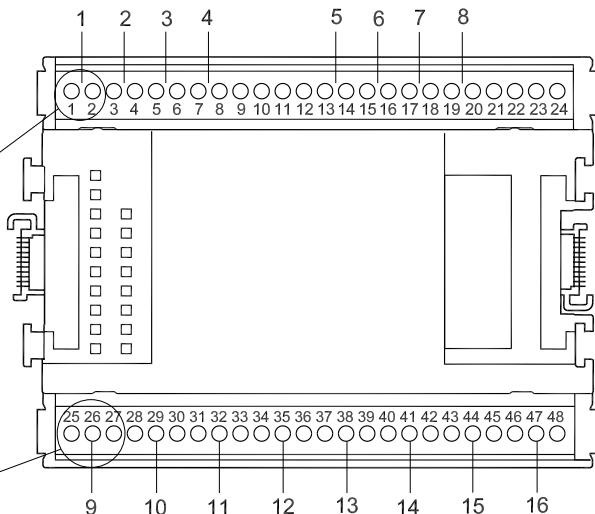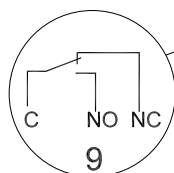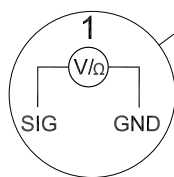

Terminal 9: 12 V
Terminal 10: 5 V
Terminal 21: 12 V
Terminal 22: 5 V
Terminal 11, 12, 23, 24 :




Override (off / Auto / on)

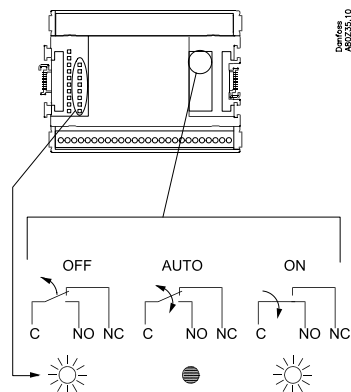

Danfoss
A60235.10

	Signal	Signal type
S (sensor) Pt 1000 ohm/0°C 	S1 S2 Saux1 Saux2 SSA SdA	Pt 1000
P (pressure) AKS 32R AKS 2050 AKS 32 	POA POB PcA PcB Paux	AKS 32R AKS 2050 MBS 8250 -1 - xx bar AKS 32 -1 - zz bar
U (voltage) + ——— SIG - ——— GND	...	0 - 5 V 0 - 10 V
On/Off 	Ext. Main switch Day/ Night Door	Active at: Closed / Open
DO 	Comp 1 Comp 2 Fan 1 Alarm	Active at: ON / OFF

 Address

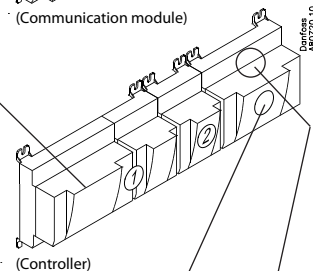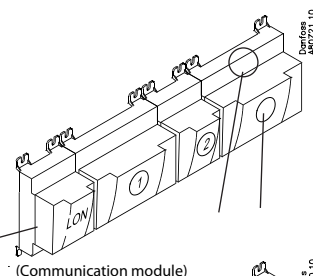

Signal	Signal type / Active at	Module	Point	Terminal
			1 (AI 1)	1 - 2
			2 (AI 2)	3 - 4
			3 (AI 3)	5 - 6
			4 (AI 4)	7 - 8
			5 (AI 5)	13 - 14
			6 (AI 6)	15 - 16
			7 (AI 7)	17 - 18
			8 (AI 8)	19 - 20
			9 (DO 1)	25-26-27
			10 (DO 2)	28-29-30
			11 (DO 3)	31-32-33
			12 (DO 4)	34-35-36
			13 (DO 5)	37-38-39
			14 (DO 6)	40-41-42
			15 (DO 7)	43-44-45
			16 (DO 8)	46-47-48



The Product contains electrical components
And may not be disposed together with domestic waste.
Equipment must be separate collected with Electrical and Electronic waste. According to Local and currently valid legislation.