


Manual

Carat

Carat Timer Mini 24 timmar, inomhusbruk
Art nr 333909

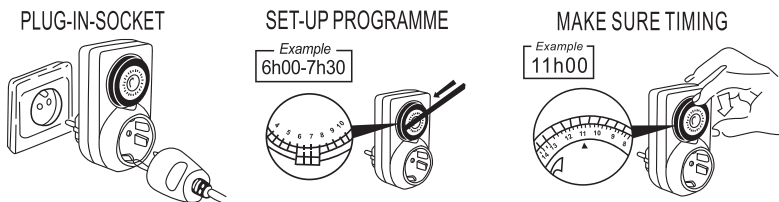

SE

Ställa timern

Anslut produkten till ett vägguttag och anslut en apparat till timern.
Växla mellan funktionerna med brytaren på sidan.
"I": Timern är i konstant drift.
"L": Timern är på. Brytaren regleras av klockan.

Ställ in aktuell tid

Rotera inställningsskivan medurs tills pilen pekar på aktuell tid.

Ställ in tid för till- och frånslag

På inställningsskivan finns 48 tidsegment som motsvarar 30 minuter var, justerbar upp till 24 timmar.
Tryck ner de segment som motsvarar de klockslag på dygnet som apparaten ska vara påslagen.
Då startar timern mellan de valda klockslagen varje dygn.

Viktigt

För inomhusbruk.
Läs igenom manualen noggrant före användning.
Kontrollera att apparatens spänning överensstämmer med eluttaget och timern.
Använd inte timern till apparater som kan orsaka problem och skada om timern avbryter dess operation.
Produkten får inte byggas om eller modifieras.

Skötsel

Vid rengöring ska stickproppen tas ut från vägguttaget.
Rengör produkten med torr trasa eller handduk. Använd inte vatten eller någon annan vätska för rengöring.

Tekniska data

Nätanslutning: 220-240V~50 Hz.
Max belastning: 16(2)A.
Märkeffekt: 3500 W, endast för 220-240V.
Skyddsklass: Klass 1.
IP-Klass: IP20.




Distribueras av GG Carat | Tlf: 018-68 69 00 | order@ggcarat.se | www.ggcarat.se

Manual

Carat

Carat Timer Mini 24 hour, indoor use
Art nr 333909

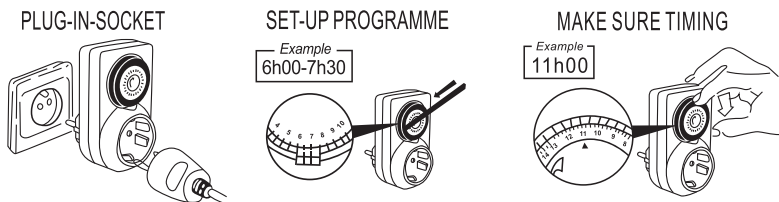

EN

Set the timer

Connect the product to a wall socket and connect a device to the timer.
Switch between the functions with the switch on the side.
"I": The timer is in constant operation.
"L": The timer is on. The switch is controlled by the clock.

Set the current time

Rotate the setting dial clockwise until the arrow points to the current time.

Set time for on and off

The setting dial has 48 time segments matching to 30 minutes each, adjustable up to 24 hours.
Press down the segments that represent the times of the day that the device should be switched on.
Then the timer starts between the selected times every day.

Important

For indoor use.
Read the user manual carefully before use.
Check that the appliance's voltage corresponds to the electrical outlet and the timer.
Do not use the timer for appliances that may cause problems and damage if the timer interrupts the devices operation.
The product must not be rebuilt or modified.

Maintenance

When cleaning, remove the plug from the wall socket.
Clean the product with a dry cloth or towel. Do not use water or any other liquid for cleaning.

Tecnical data

Power supply: 220-240V~50 Hz.
Max load: 16(2)A.
Rated output: 3500 W, only for 220-240V.
Protection class: Class 1.
Type of protection: IP20.



Distribueras av GG Carat | Tlf: 018-68 69 00 | order@ggcarat.se | www.ggcarat.se