

Series A19A/A19B/A19D

Thermostats for Refrigeration, Cooling, Heating, Ventilation and Air-conditioning

ntroduction

These thermostats are designed for refrigeration, cooling, heating, ventilation and air-conditioning applications. Standard models are provided for remote sensing or room sensing. Models with manual reset are available for low or high limit functions.

Description

These thermostats are available with fixed or adjustable differential. The various control ranges cover a broad range of temperature applications with a minimum number of models. On request a built-in high or low limit stop is possible and can be adjusted quickly and easily in the field. All models have a universal way of adjustment. For this purpose a knob and sealing cap are enclosed.

All A19 style 1 wholesaler code models have a bulb clamp plus screw also enclosed.



A19A capillary thermostat A19B space thermostat

Feat	Feature and Benefits									
☐ Liquid filled sensing element	No cross ambient temperature problems									
	Contact differential over the whole range									
☐ Dust tight Penn switch	Prevents pollution of the contacts by electrostatic influences.									
☐ Trip free manual reset	Override is not possible in the control function									
☐ Front adjustment	Less mounting space required.									

Note

These controls are designed for use only as operating controls. Where an operating control failure would result in personal injury or loss of property it is the responsibility of the installer to add devices or systems that protect against, or warn of, control failure.

SPDT contacts are standard on all models. Instruments have compact sizes. Types A19ACC and A19ADC have a trip-free manual reset . Reset button must be pressed and released. Contact cannot be blocked in closed position. All types have VDE and SEV approval.

To facilitate ordering, wholesaler codes have been added on some universal models. All models are provided with a separate knob and sealing cap.

Type number matrix

A19AAC capillary thermostat, fixed differential.

A19AAF capillary thermostat, special close

fixed differential.

A19ABC capillary or immersion thermostat,

adjustable differential.

A19ACC capillary thermostat, lock-out low

with manual reset.

A19ADC immersion thermostat, lock-out high

with manual reset.

A19BAC space thermostat, fixed differential.

A19BBC space thermostat, adjustable

differential.

A19DAC strap-on thermostat. A19DAF strap-on thermostat

Adjustment

- Models "set low" (refer to cover label)
 The dial indicates the low switch point (1 2 open, 1 3 closed).
 The high switch point (1 2 closed,
 - 1 3 open) is obtained by adding the differential to the low switch point.
- Models "set high" (refer to cover label)
 The dial indicates the high switch point (1 2 closed, 1 3 open). The low switch point (1 2 open, 1 3 closed) is obtained by deducting the differential from the high switch point.

Exception: Type A19ADC, dial indicates high switch point (1 - 3 closed, 1 - 2 open).

Note

The standard screwdriver adjustment can be converted easily in the field to knob adjustment. Also concealing of adjustment and scale is possible after installation.

Contact functions

Types A19AAC, A19AAF, A19ABC, A19BAC, A19BBC, A19DAC

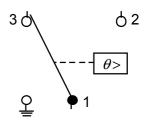


Fig. 1
1-2 closes on temperature increase

Type A19ACC

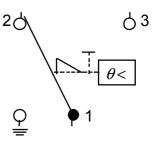


Fig. 2 1-2 opens on temperature decrease

Type A19ADC

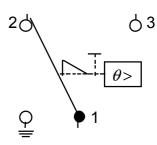


Fig.3
1-2 opens on temperature increase

Repair and replacement

Repair is not possible. In case of an improperly functioning control, please check with your nearest supplier. When contacting the supplier for a replacement you should state the type/model number of the control. This number can be found on the data plate or cover label.

Sensor styles

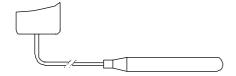


Fig. 4 Style 1a (drawn bulb)

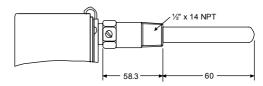


Fig. 7 Style 2

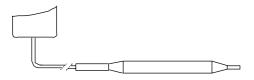


Fig.5
Style 1b swaged bulb, can be used with closed-tank connector FTG13A-600

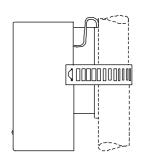


Fig. 8 Style 20

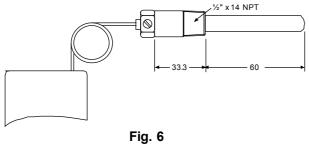


Fig. 6 Style 4h

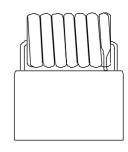


Fig. 9 Style 3 (coil)

Bulb size and finish, bulb wells

Range (°C)	Style	Bulb size (mm)	Finish	Bulb well (optional)	
-35 to +10	1b	9.5 x 110	Tin-plated	WEL14A602R	
-35 to +10	3	-	Stainless Steel	-	
-5 to +28	1b	9.5 x 135	Tin-plated	WEL14A603R	
-5 to +28	3	-	Stainless Steel	-	
-35 to +40	1b	9.5 x 110	Tin-plated	WEL14A602R	
-35 to +40	3	-	Stainless Steel	-	
0 to 13	1a	9.3 x 80	-	WEL16A601R	
0 to 43	3	-	Stainless Steel	-	
1 to 60	1b	9.5 x 115	-	WEL14A602R	
5 to 32	1b	9.5 x 155	Tin-plated	No bulb well available	
10 to 95	1a	7.4 x 75	-	WEL11A601R	
40 to 120	1b	9.5 x 100	-	WEL14A602R	
35 to 150	1a	5 x 265	-	No bulb well or closed tank connector possible	
90 to 290	1a	5 x 155	-	No bulb well or closed tank connector possible	

Type number selection table:

Range (°C)	Diff. (K)	Bulb style	Setting (see page 2	Cap. length	Max. bulb	Wholesaler code	Order number
			adjustment)		temp.		

Type A19AAC Capillary thermostat, fixed differential

-35 to +10	2.5	1b	set low	2 m	60 °C	A19AAC-9102
-5 to +28	2	1b	set low	2 m	60 °C	A19AAC-9005
-5 to +28	2	1b	set low	5 m	60 °C	A19AAC-9124
1 to 60	2	1b	set low	3 m	85 °C	A19AAC-9127
40 to 120	3.5	1b	set high	2 m	145 °C	A19AAC-9009
35 to 150	4	1a	set high	2 m	180 °C	A19AAC-9107
90 to 290	5.5	1a	set high	2 m	290 °C	A19AAC-9108

Type A19ABC Capillary or immersion thermostat, adjustable differential

-35 to +40	2.8 to 8	1b	set low	3.5 m	60 °C	A19-A4	A19ABC-9037
-35 to +40	2.8 to 8	1b	set low	6.5 m	60 °C	A19-A5	A19ABC-9036
-35 to +10	2.8 to 11	1b	set low	2 m	60 °C	A19-A1	A19ABC-9103
-5 to +28	2 to 8	1b	set low	2 m	60 °C	A19-A2	A19ABC-9104
1 to 60	2 to 8	1b	set low	5 m	85 °C		A19ABC-9117
1 to 60	2 to 8	1b	set low	3 m	85 °C	A19-A3	A19ABC-9116
10 to 95	3.5 to 13	1a	set high	3.5 m	115 °C		A19ABC-9106
40 to 120	3.5 to 13	2	set high	-	145 °C		A19ABC-9011
							bulb well incl.
40 to 120	3.5 to 13	4h	set high	2 m	145 °C		A19ABC-9012
							bulb well incl.

Type A19ACC Capillary thermostat, lock-out low with manual reset

-35 to +10	6 🗻	1b	set low	2 m	60 °C		A19ACC-9100
-35 to +10 🔏	6 🗻	1b	set low	3.5 m	60 °C		A19ACC-9105
-35 to +10 🔏	6 🗻	1b	set low	5 m	60 °C		A19ACC-9111
-35 to +10 🔏	6 🗻	1b	set low	6.5 m	60 °C	A19-F	A19ACC-9116
-5 to +28	4 🗻	1b	set low	2 m	60 °C		A19ACC-9101
-5 to +28	4 🗻	1b	set low	5 m	60 °C		A19ACC-9103
-5 to +28	4 🗻	1b	set low	3 m	60 °C		A19ACC-9107

Type A19ADC immersion thermostat, lock-out high with manual reset

40 to 120	7 ♦	2	set high	-	145 °C	A19ADC-9200
						bulb well incl.

Type A19AAF Capillary thermostat, close, fixed differential

0 to 10	1.5	1a	set low	2 m	80 °C		A19AAF-9101
0 to 10	1.5	1a	set low	2 m	80 °C	A19-M <u>∲</u>	A19AAF-9102
5 to 32	0.75	1b	set high	2 m	60 °C		A19AAF-9103

- Indicates temperature increase above cut-out point to make reset possible.
- ★ Low limit stop factory set +2.5 °C may be Milk-cooler thermostat. removed in the field.
- + Indicates temperature decrease below cutout point to make reset possible.

Type number selection table:

Range	Diff.	Bulb	Setting	Cap.	Max.	Wholesaler code	Order
(°C)	(K)	style	(see page 2	length	bulb		number
			adjustment)		temp.		

Type A19BAC Space thermostat, fixed differential

-35 to +10	2.5	3	set low	-	60 °C	A19-B1	A19BAC-9250
-5 to +28	2	3	set low	-	60 °C	A19-B2	A19BAC-9251
0 to 43	2	3	set high	-	60 °C	A19-B3	A19BAC-9001

Type A19BBC Space thermostat, adjustable differential


-35 to +40	2.8/8	3	set low	-	60 °C	A19-B4	A19BBC-9275

Type A19DAC, Strap-on thermostat, fixed differential

4	0 to 120	4.5	20	set high	-	145°C	A19DAC-9001
9:	2 to 116	2	20	set high	-	145°C	A19DAF-9001

Note: If what you need is not in the type number selection table, then please contact your representative.

Accessories (optional)

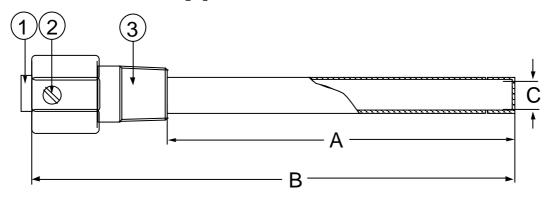

Order no.	Dimension A	Dimension B	Dimension C Internal
WEL11A601R	60 mm	118 mm	7.3 mm
WEL14A602R	125 mm	171 mm	9.8 mm
WEL14A603R	147 mm	193 mm	9.8 mm
WEL16A601R	71 mm	117 mm	9.5 mm

- 1. Bushing
- 2. Set screw
- 3. Adapter, 1/2"-14 NPT

Fig. 10 Bulb well (brass, copper pipe)


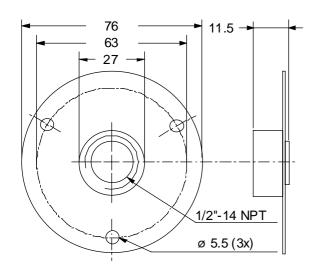


Fig. 11

Duct flange to be used with closed-tank connector FTG13A-600R.


Order number T-752-1001

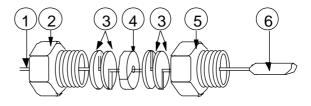

- 1. Style 1b bulb support tube
- 2. Packing nut
- 3. Washer
- 4. Packing
- **5.** Adapter, 1/2"-14 NPT
- 6 . Bulb

Fig. 12 Closed-tank connector Order number FTG13A-600R

Dimensions (mm)

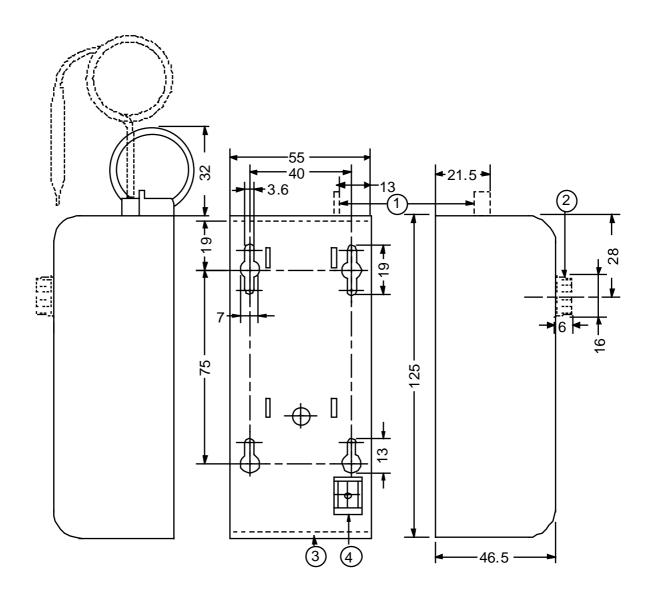

- 1 Reset lever
- 2 Knob packed separately with the control
 3 22.3 mm dia. cable inlet hole for PG-16
 4 Earth screw

Fig. 13

Specifications

According to low voltage directive and EMC directive		
-35 to +290 °C. See type number selection table.		
See type number selection table.		
Controls with adjustable differential (types A19ABC and A19BBC) have an adjustment lever under the cover.		
Styles 1a, 1b, 2, 3, 4h, and 20 (see drawings page 3)		
~15(8) A, 230 V; except A19AAF and A19DAF: ~15(3) A 230 V, and A19ABC-9036/9037: ~15(5) A 230 V		
-35 to +55 °C		
22.3 mm diam. hole for PG-16 connector		
Case	1.75 mm cold-rolled zinc plated steel	
Cover	1.5 mm ABS plastic	
IP30		
Individual pack 0.4 kg		
Overpack	10 kg (24 pcs)	
(see dimension drawing)		
	-35 to +290 °C. See type number Controls with ad an adjustment lesse 13, 1b, 2 ~15(8) A, 230 V A19ABC-9036/9 -35 to +55 °C 22.3 mm diam. It Case Cover IP30 Individual pack Overpack	

The performance specifications are nominal and conform to acceptable industry standards. For applications at conditions beyond these specifications, consult the local Johnson Controls office or representative. Johnson Controls shall not be liable for damages resulting from misapplication or misuse of its products.



Johnson Controls International, Inc.

Headquarters: European Headquarters: European Factories:

Milwaukee, WI, USA
Westendhof 8, 45143 Essen, Germany
Lomagna (Italy), Leeuwarden (The Netherlands) and Essen (Germany)

Branch Offices: Principal European Cities. This document is subject to change

Printed in Europe